

BA165/BA245

Lockable Ball Carts



Customer Service
(800) 247-7668

PARTS LIST					
Item	Qty	Description	Item	Qty	Description
A	2	Cart Side	D	4	Caster
B	12	Horizontal Bars (packaged separately)	E	1	5/16" Allen Wrench
C	24	1/2" Button Head Cap Screw			

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
 - ◆ Read all instructions before proceeding.
1. Assemble *Cart Sides* (A) to *Horizontal Bars* (B) using the *5/16" Allen Wrench* (E) and *1/2" Button Head Cap Screws* (C). See Figure 1.
 2. Install *Casters* (D) into the bottom of *Cart Sides* (A). See Figure 1.
 3. To secure the ball cart, rotate the locking plate and lock with a padlock (customer supplied). See Figure 1.

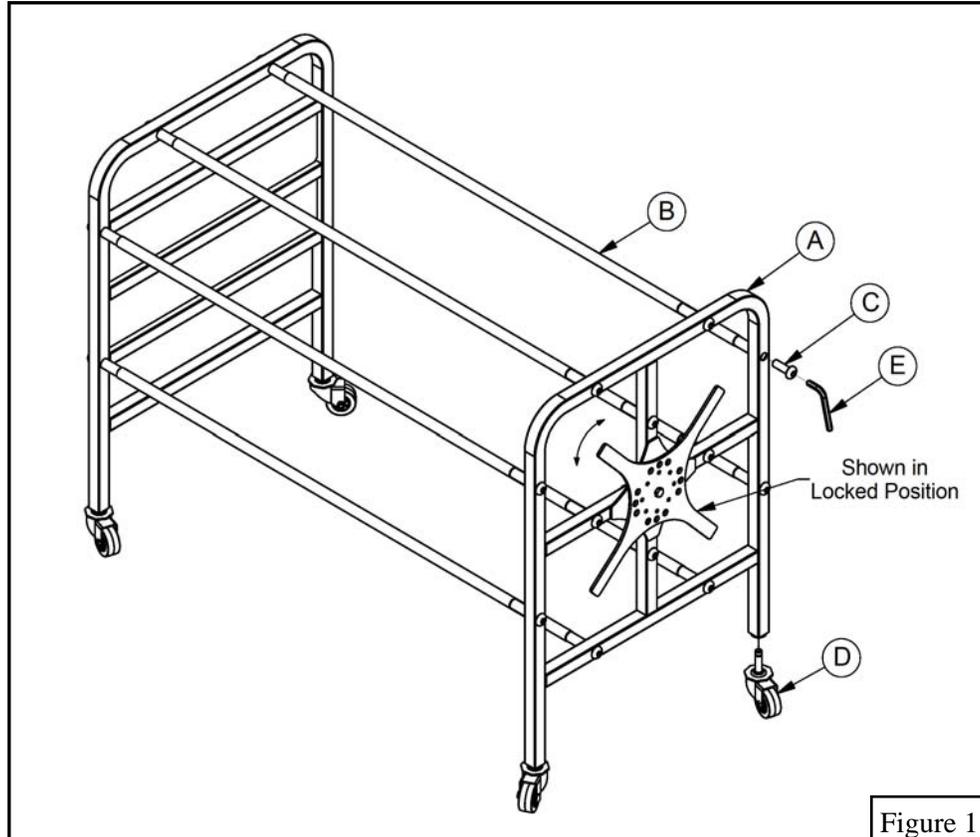


Figure 1